



Product code:


C9G3EX002X

Product: **Cooker**


Model: **EBS 965 MLXX**

Product code	Serial No.	Product remark	Issue No.	Issue Date
C9G3EX002X				October 2025


Key part information	
A	Auxiliary burner
SR	Semirapid burner
R	Rapid burner
DCC	Dual ring compact burner

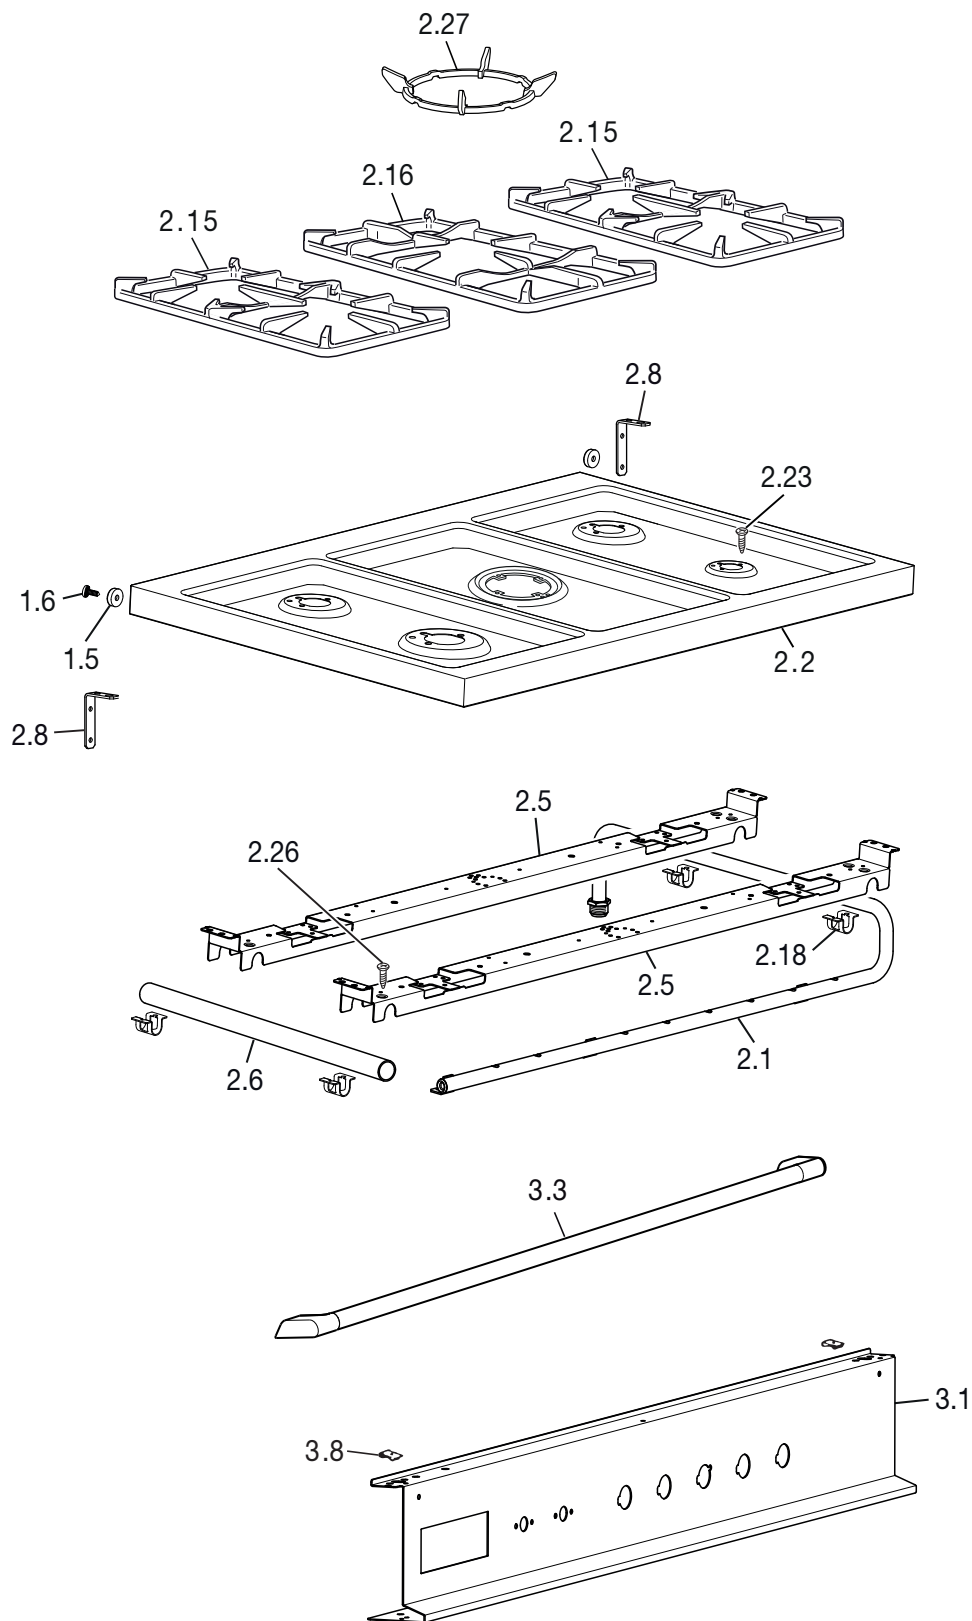


Ref.	Part description	Product code	
		C9G3EX002X	
		Feature	Part code
1.5	Plug		040041001
1.6	Screw		001008
2.1	Gas inlet pipe		3429G5001
2.2	Cooktop		331935001S
2.5	Burners support		51B9S16
2.6	Fictitious pipe		3429G01
2.8	Rear coupler		094886
2.15	Pan-support		217867
2.16	Central pan-support		217868
2.18	Fixing plate		094793
2.23	Stainless steel screw		001375
2.26	Screw		001352
2.27	Wok grid		217555
3.1	Control panel		35C9G32LEX
3.3	Handle		037424001
3.8	Clip		213007

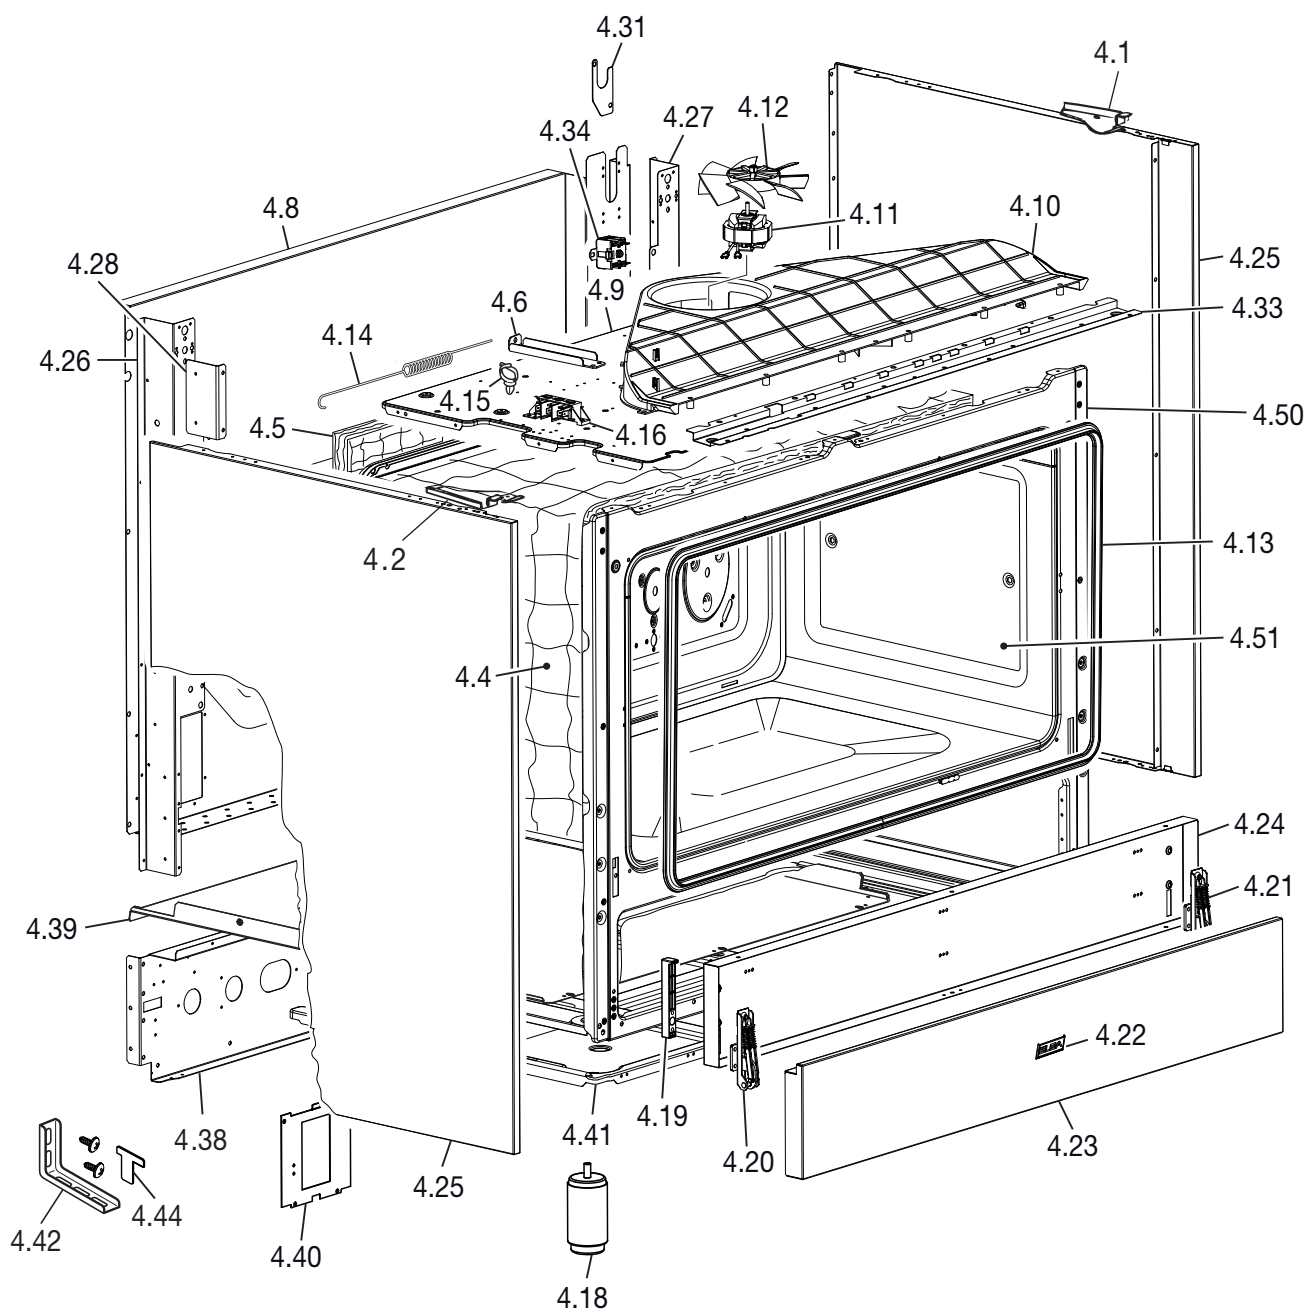


Ref.	Part description	Product code	
		C9G3EX002X	
		Feature	Part code
4.1	Fron right coupler		094658
4.2	Fron left coupler		094659
4.4	Oven insulation		030282
4.5	Rear insulation		030283
4.6	Rear panel spacer bracket		094895.1
4.8	Rear panel		4119G01Z
4.9	Upper shelter		4219G04Z
4.10	Cooling fan conveyor		1031842
4.11	Cooling fan motor	230 V 50 Hz	079072
4.12	Fan		1031843
4.13	Seal		053202
4.14	Insulation spring		035130
4.15	Cable support		103672
4.16	Terminal block	40A - 6P	051082
		40A - 3P	051083
4.18	Shim		1032153A
4.19	Compartment panel spacer		040102
4.20	Left hinge		063173
4.21	Right hinge		063172
4.22	Badge		081136
4.23	Front panel		371V9G01L
4.24	Inside panel		373V9G01A
4.25	Side panel		36C9G02S
4.26	Left rear trim		51B9G05Z
4.27	Right rear trim		51B9G06Z
4.28	Rear coupler		094887
4.31	Bracket		094412
4.33	Control panel fixing trim		51B9G20Z
4.34	Cut-off thermostat		066225
4.38	Rear panel extension		4219G03Z
4.39	Lower shelter		4219G02Z
4.40	Terminal block support		51B9E12
4.41	Lower element cover		45K96004Z
4.42	Anti-tilt bracket		094153
4.44	Lock pin		1031207
4.50	Body front panel		45B9G001G
4.51	Oven cube		4509G1EM44

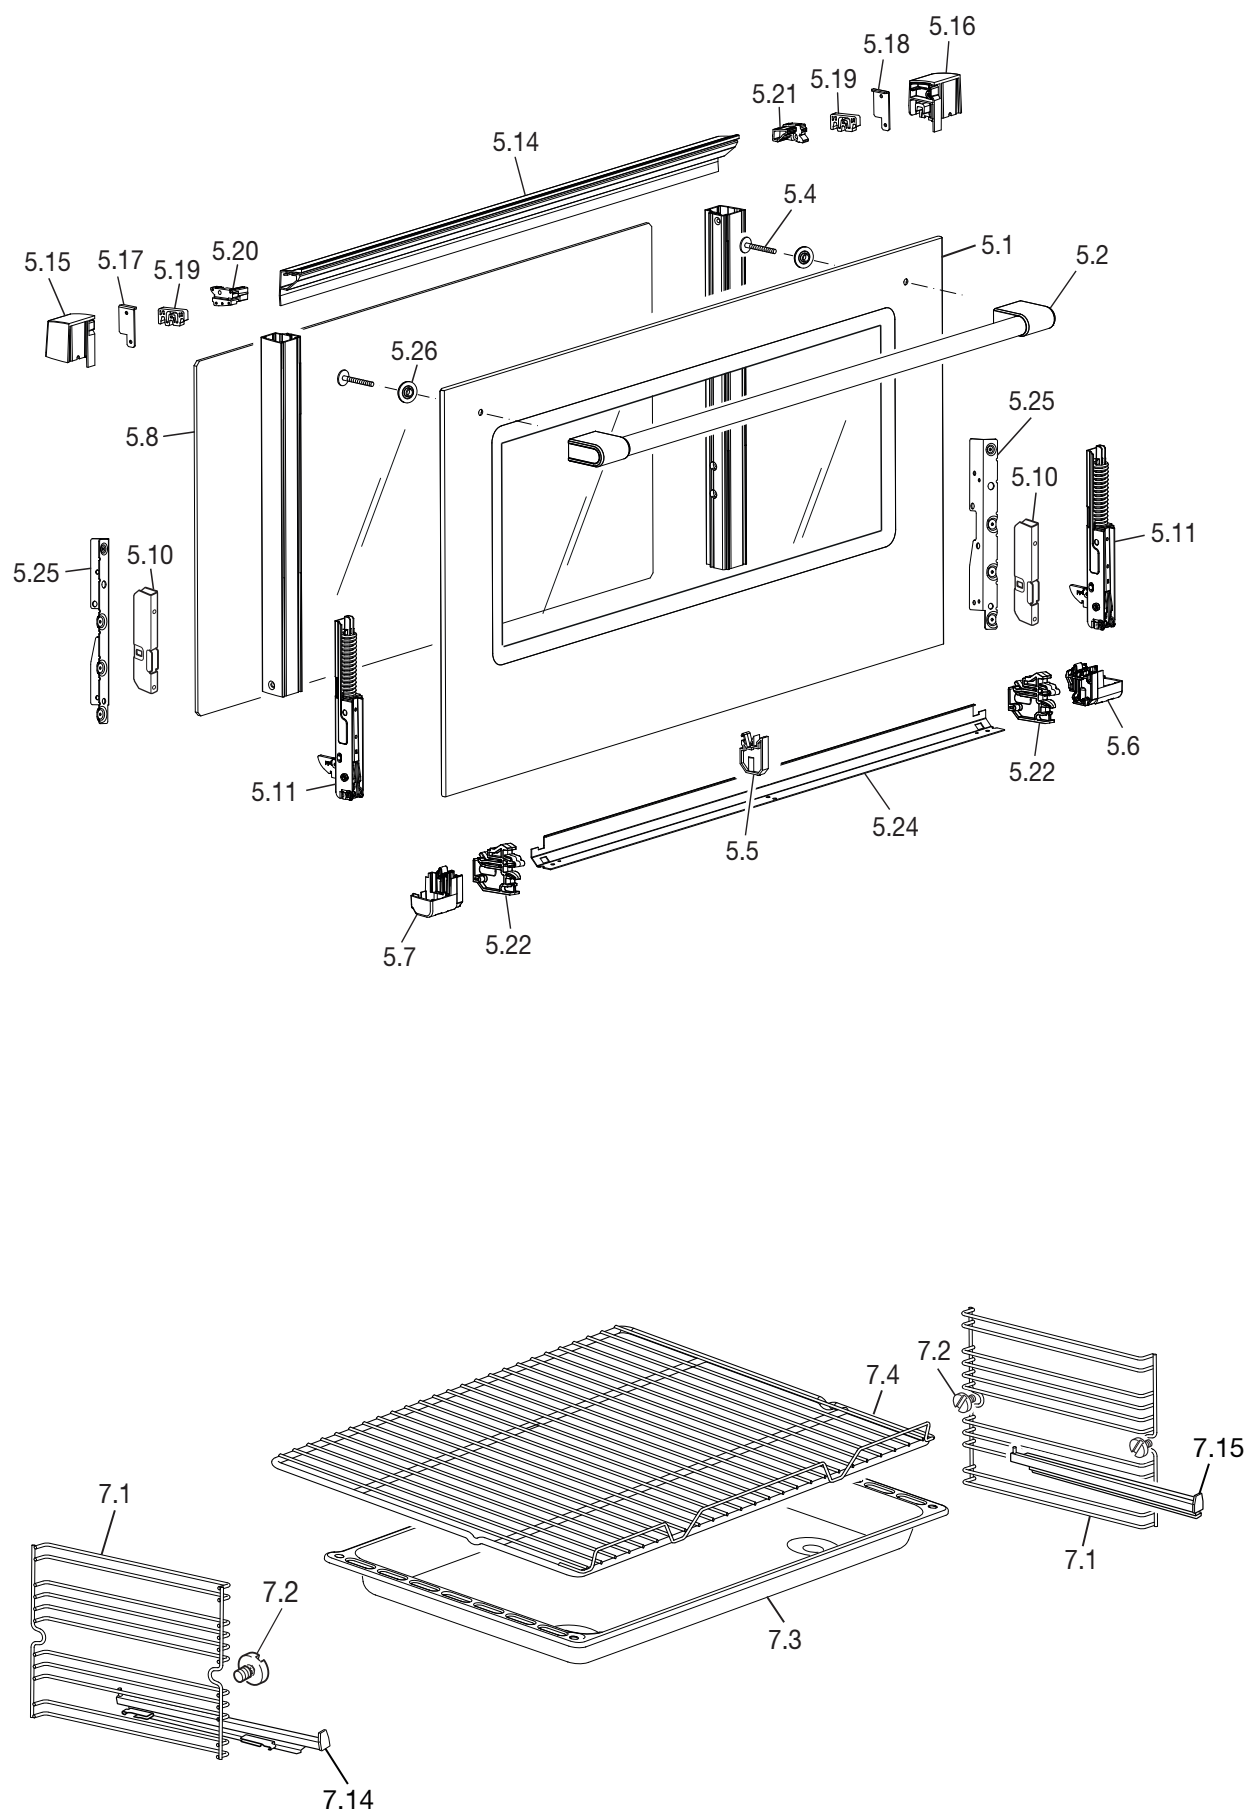














Ref.	Part description	Product code	
		C9G3EX002X	
		Feature	Part code
5.1	Door glass		0329G031
5.2	Door handle		037431001
5.4	Screw		001270
5.5	Central support head door glass		069098
5.6	Lower right head door trim		069119
5.7	Lower left head door trim		069120
5.8	Inner glass		0313386
5.10	Door hinge (female)		063164 - 063165
5.11	Right door hinge (male)		063171
5.14	Upper door trim		51B9G02A
5.15	Upper left head door trim		069104
5.16	Upper right head door trim		069103
5.17	Upper left door fixing bracket		094714
5.18	Upper right door fixing bracket		094715
5.19	Rubber		040082
5.20	Upper left inner corner		069106
5.21	Upper right inner corner		069105
5.22	Side support head door glass		069097
5.24	Lower door trim		51B9G21A
5.25	Female hinge support bracket		094896
5.26	Handle bush		085108
7.1	Shelf support		217789
7.2	Shelf support screw		001142
7.3	Oven tray		48B9G01G
7.4	Oven shelf		217785.1
7.14	Left telescopic runner		1031783
7.15	Right telescopic runner		1031782

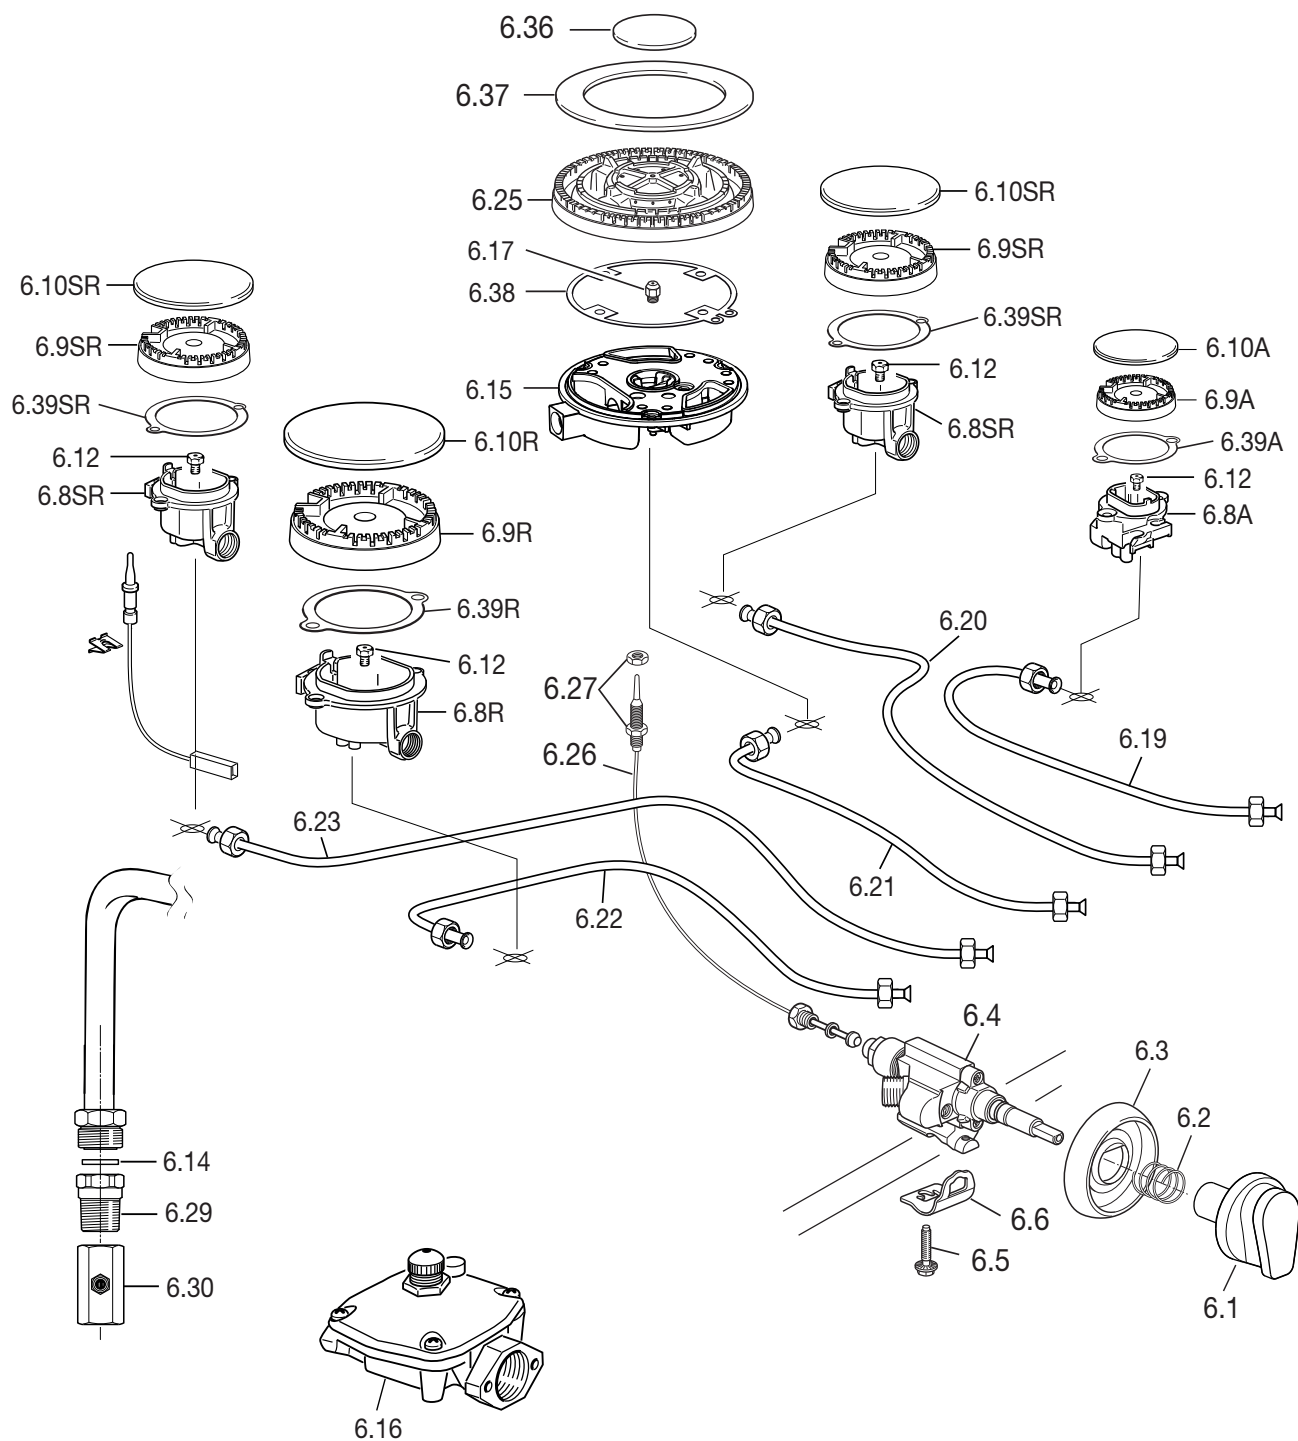

Ref.	Part description	Product code	
		C9G3EX002X	
		Feature	Part code
6.1	Burner knob		218E00A548
6.2	Knob spring		035036
6.3	Burner knob ring		218300E273
6.4	Tap	Ø 0.33 - A	106342G25
		Ø 0.34 - SR	106343G25
		Ø 0.43 - R	106344G25
		Ø 0.64 - DCC	106345G25
6.5	Tap fixing screw		001371
6.6	Tap bracket		094976
6.8A	Burner-cup	A	215537
6.8SR		SR	215538
6.8R		R	215539
6.9R	Burner head	R	068164
6.9SR		SR	068163
6.9A		A	068162
6.10A	Burner-cap	A	216172005A
6.10SR		SR	216173005A
6.10R		R	216174005A
6.12	Injector	Ø 0.72 - G25	101230
		Ø 0.94 - G25	101231
		Ø 1.25 - G25	101477
6.14	Elbow gasket		053024.1
6.15	Burner-cup	DCC	215540
6.16	Gas pressure regulator 1/2" NG		103347
6.17	Injector	DCC - Ø 1.45 G25	101476
6.19	Front right inlet pipe	A	0291494
6.20	Rear right inlet pipe	SR	0291493
6.21	Central inlet pipe	DCC	0291492
6.22	Front left inlet pipe	R	0291491
6.23	Rear left inlet pipe	SR	0291477
6.25	Burner head	DCC	068165
6.26	Burner thermocouple	L=500 mm	107039
		DCC - L=450 mm	107057
		L=600 mm	107040
6.27	Thermocouple nut	A-SR-R	214057
		DCC	214067
6.29	Connection		067026
6.30	Test point adaptor		103468
6.36	Burner-cap inside	DCC	216175005A
6.37	Burner-cap outside		216176005A

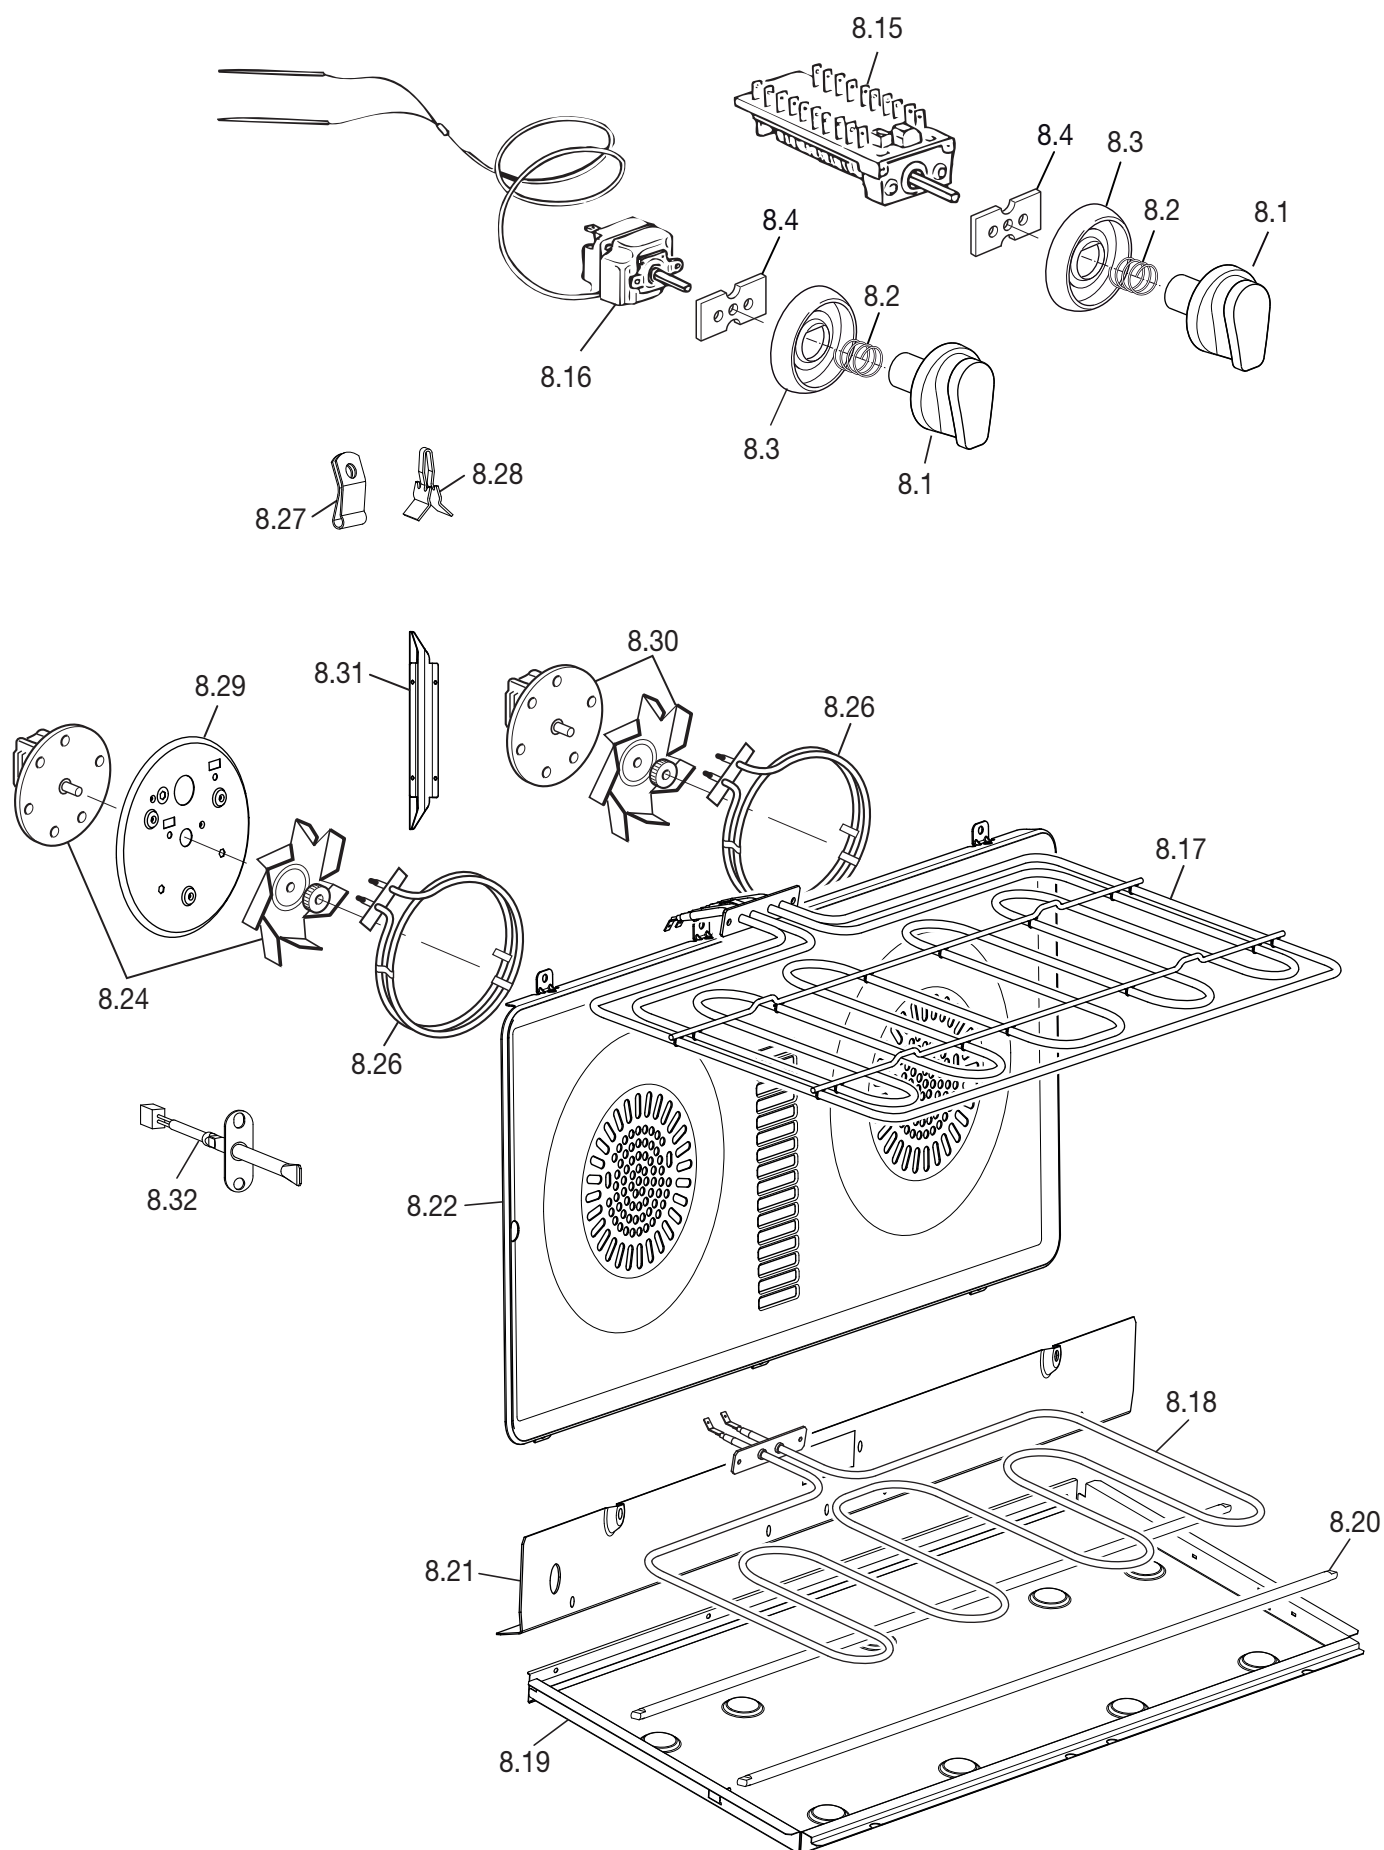

Ref.	Part description	Product code	
		C9G3EX002X	
		Feature	Part code
8.1	Knob		218E00A549
8.2	Knob spring		035036
8.3	Thermostat knob ring		218300E273
8.4	Switch spacer		103948
8.15	Oven switch		050028.1
8.16	Oven thermostat		066220_26
8.17	Top + grill element	230V	062171004
8.18	Bottom element		062170004
8.19	Lower element protection		4219G05Z
8.20	Bottom element support		1031844
8.21	Bottom element bar		51B9G07Z
8.22	Fan diffuser		47A9G05G
8.24	Complete oven fan left	220/240 V 50-60 Hz	079073
8.26	Fan element	230V	062168004
8.27	Clip		213031
8.28			213026
8.29	Fan motor support		51BFG01
8.30	Complete oven fan right	220/240 V 50-60 Hz	079049
8.31	Fan motor divider		4219G01G
8.32	Temperature sensor		107071

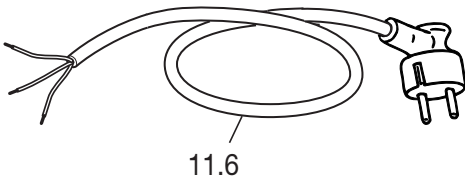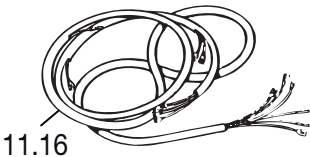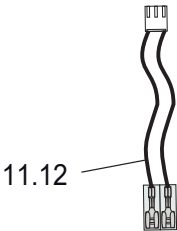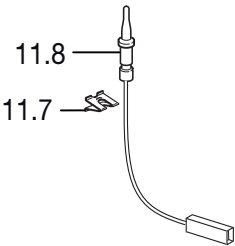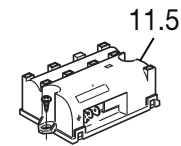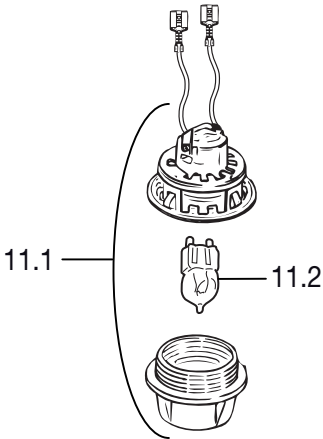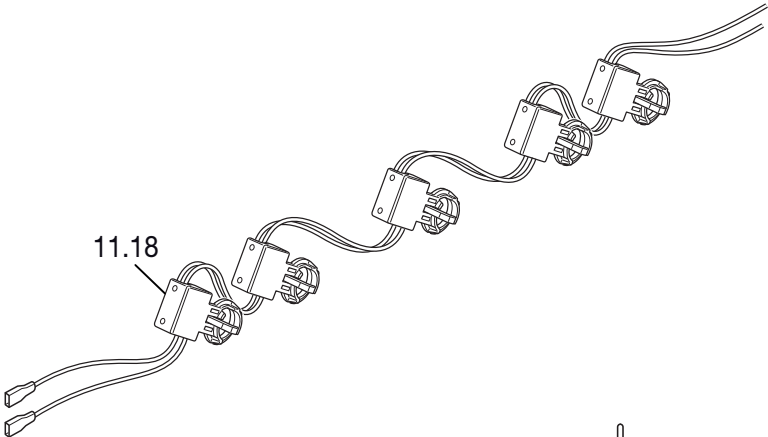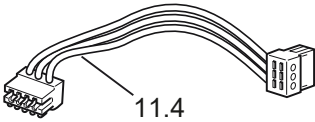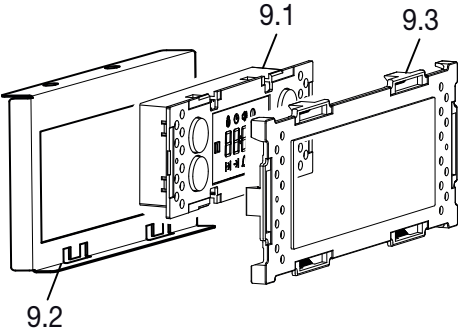

Ref.	Part description	Product code	
		C9G3EX002X	
		Feature	Part code
9.1	Electronic programmer	230 V 50 Hz	074149
9.2	Electronic programmer housing		094983
9.3	Electronic programmer mask		1031995
11.1	Lamp holder		072032
11.2	Lamp	230 V 25 W	073103
11.3	Terminal block		051087
11.4	Harness encoder		1132593
11.5	Burners ignition coil	220-240V 50-60Hz	082094
11.6	Cord	3 x 1,5	054048
11.7	Igniter spring	A-SR-R	035094
		DCC	035139
11.8	Igniter	L=630 mm	084029
		L=900 mm	084036
		DCC-L=510 mm	084084
11.10	Cable	L=280 mm	055070
		L=200 mm	103488
11.11	Terminal block	16A - 2P	051036
11.12	Harness sensor		1132592
11.13	Lamp wiring		1132919
11.16	Wiring		1133034
11.17	Cut-off thermostat	55°C	066224
11.18	Ignition switches		105053
-	Instruction booklet	GB	1106818/GB
		NL	1106818/NL